



## Installation Guide for 2014-18 Chevrolet Silverado 1500 | 2015-19 Silverado 2500HD/3500HD PRO-Series LED Tail lights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrivalled innovative technology. This installation guide takes you through the step-by-step process of installing your new **ALPHAREX TAIL LIGHTS** for your 2014-18 Chevrolet Silverado 1500 | 2015-19 Silverado 2500HD/3500HD

**DO NOT USE DIELECTRIC GREASE!**



### Table of Contents



#### PART I REMOVE TAIL LIGHTS

- **INSTALLATION TOOLS**
- **STEP 1.** Remove tail lights screws
- **STEP 2.** Unplug and remove the tail lights

#### PART II INSTALL ALPHAREX TAIL LIGHTS

- **STEP 1.** Plug the tail lights
- **STEP 2.** Install the tail lights
- **STEP 3.** Complete Installation

*Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.*

# PART I REMOVE TAIL LIGHTS

## INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION



Torx  
Screwdriver



Power Tool



Pliers



Pick Tool



1/4 Ratchet



1/4 Extension

T15  
Star Torx



Socket

**NOTE: Whenever using a power tool, please make sure do not overtighten the screws.**

Whenever working on your vehicle, always make sure your vehicle is OFF and parked.




## STEP 1. REMOVE TAIL LIGHTS SCREWS


Open the trunk gate and begin by removing the screws securing the tail lights.



Take out the top and bottom T15 screws from each side of the tail lights.

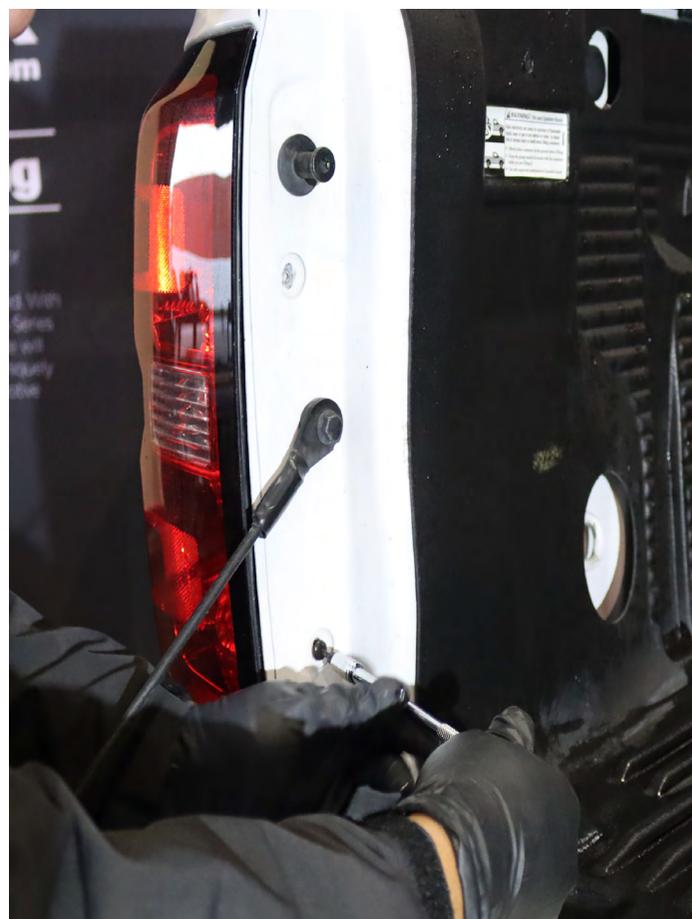


Carefully pull the tail lights outward to remove them.

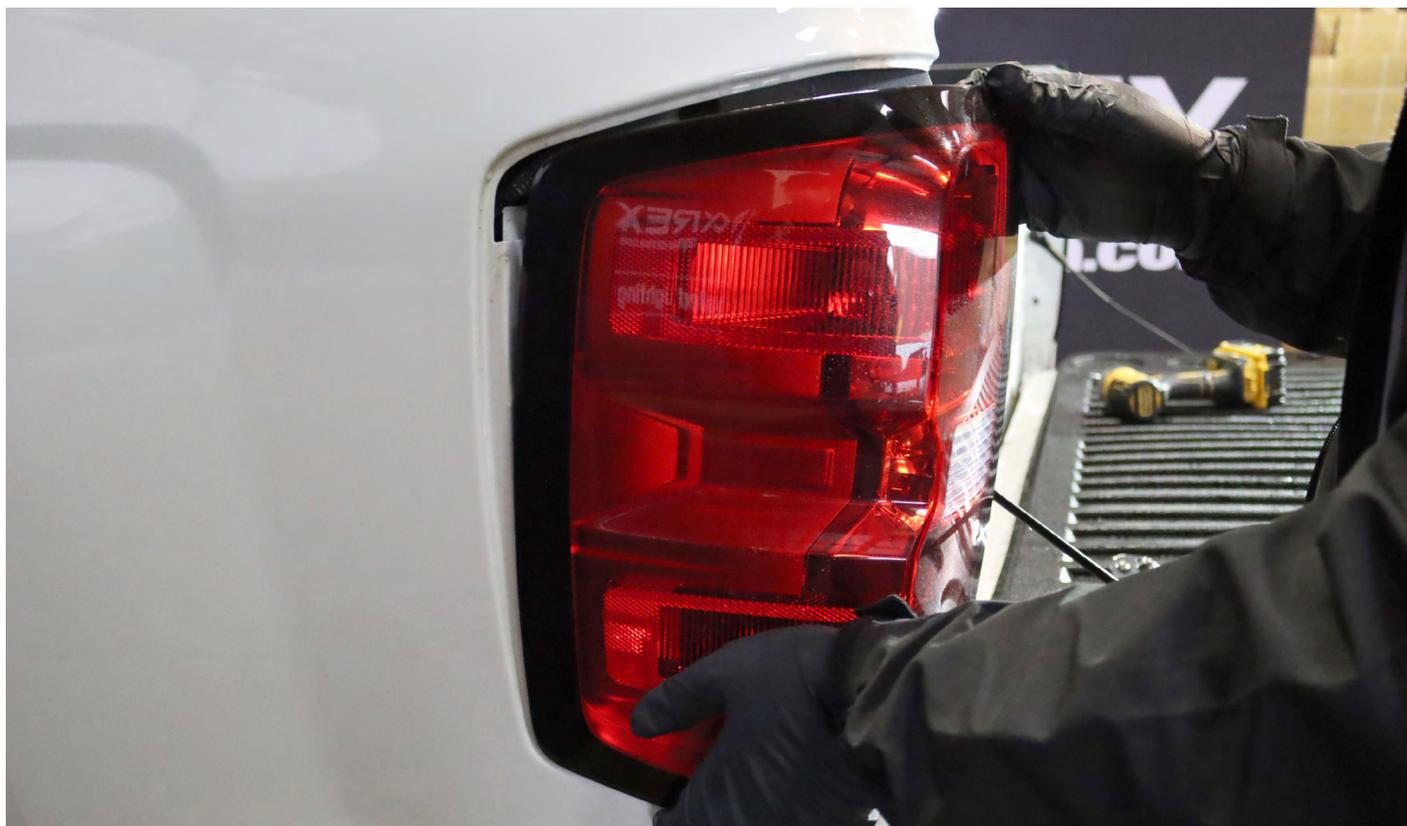

## **STEP 2. UNPLUG AND REMOVE THE TAIL LIGHTS**

Disconnect the sockets to remove the parking and turn signal light bulbs, along with the tail light assembly.

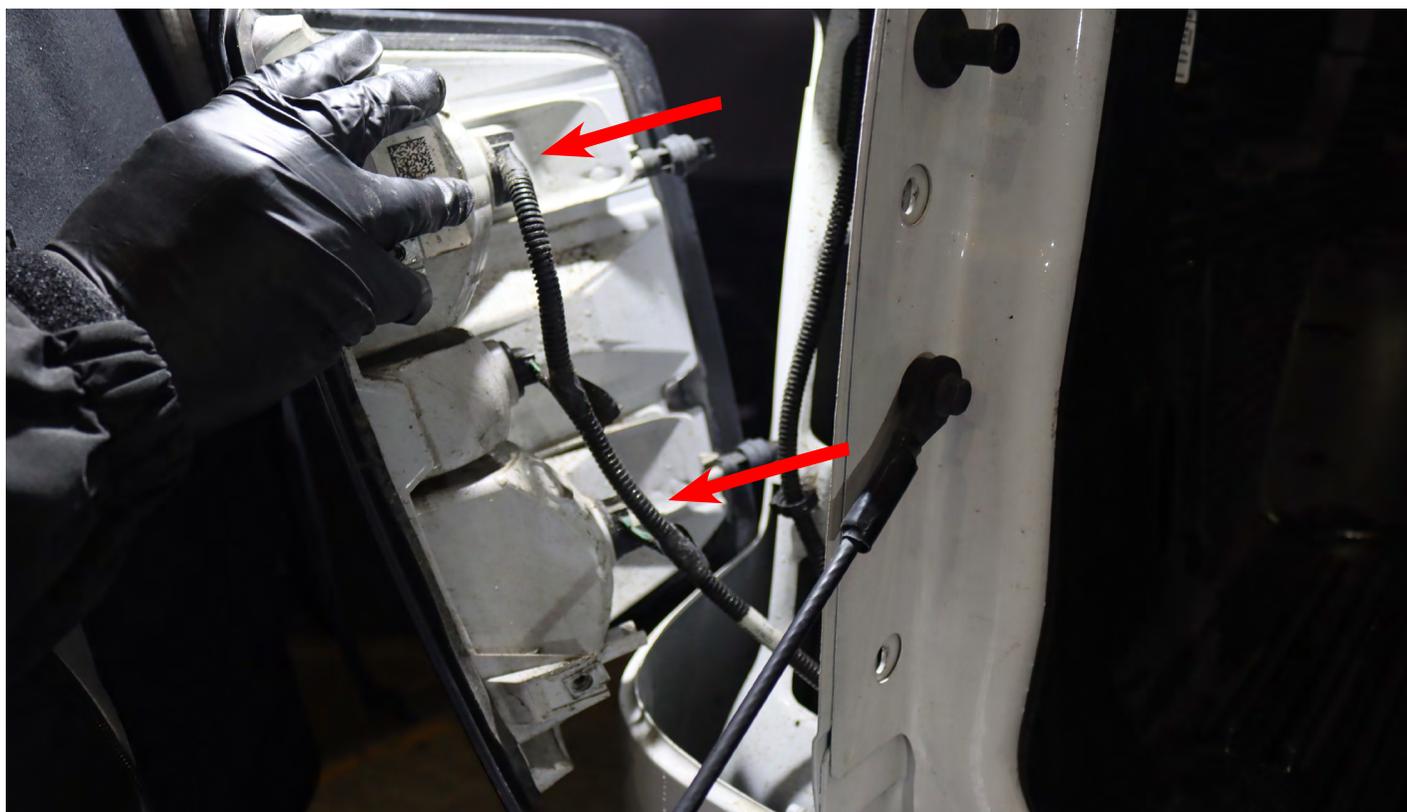

Disconnect the reverse light socket and keep the light bulb for future reinstallation.




## PART II INSTALL ALPHAREX TAIL LIGHTS






### STEP 1. PLUG THE TAIL LIGHTS

Connect the new ALPHAREX tail lights' connectors into the sockets, beginning with the reverse light socket. **DO NOT USE DIELECTRIC GREASE!**



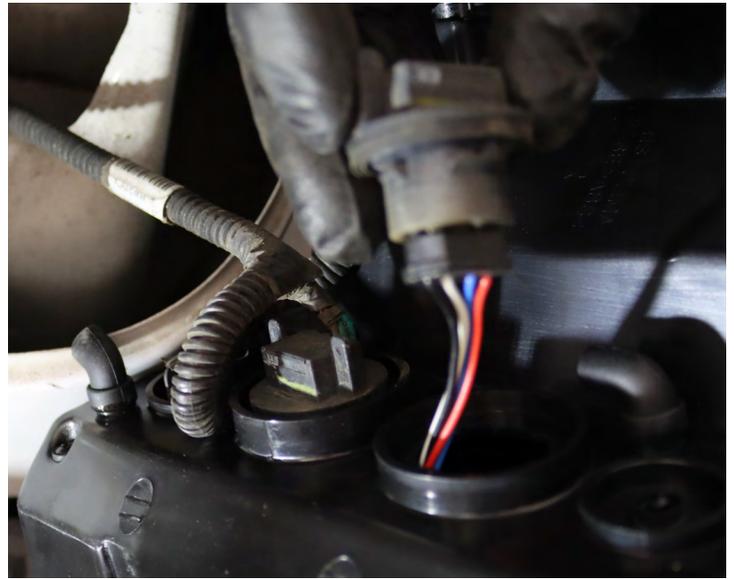

Twist and lock each of the sockets into the new ALPHAREX tail light, ensuring they are tightened and secured. **DO NOT USE DIELECTRIC GREASE!** Follow the same steps for the other tail light.

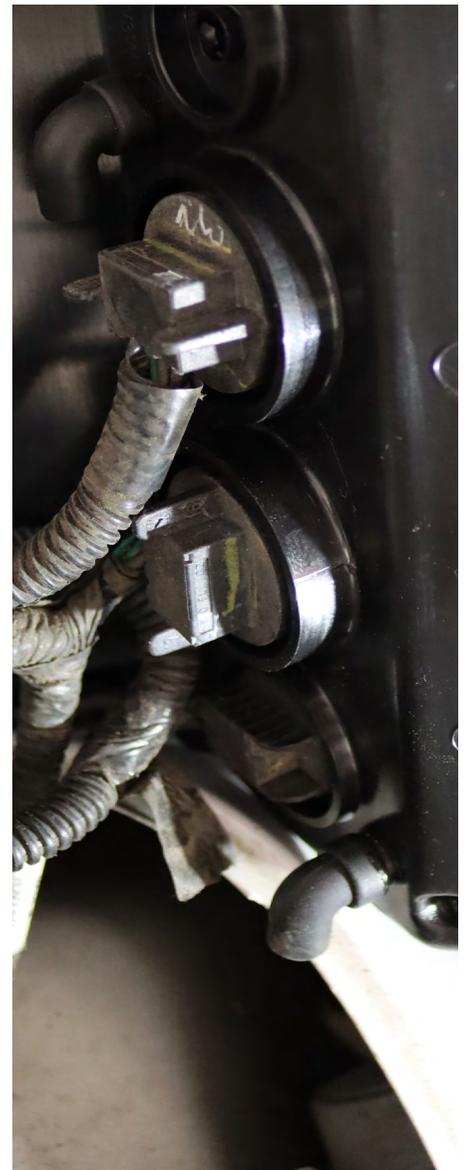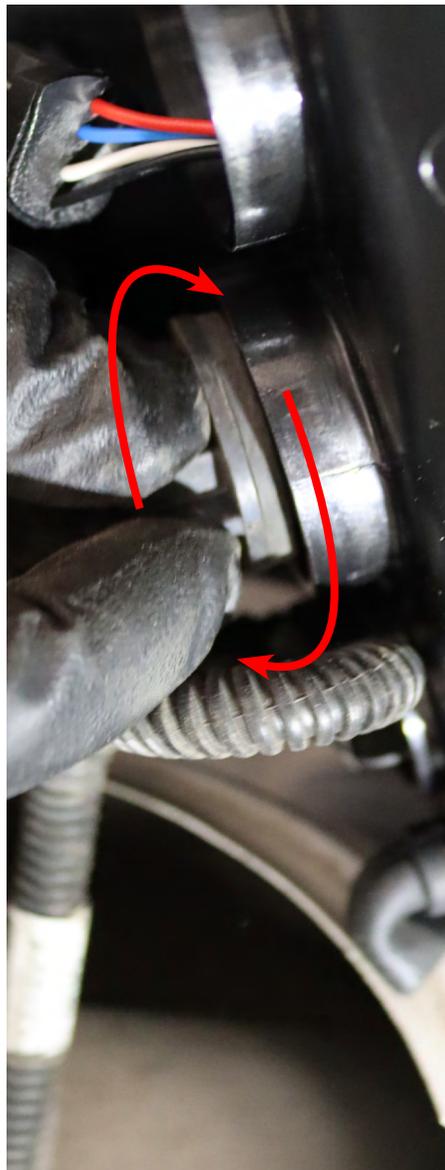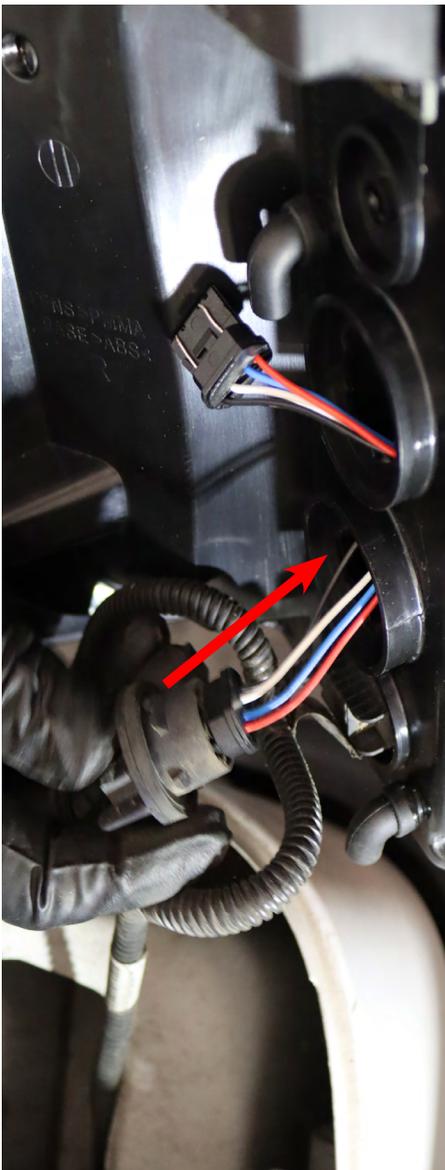


## STEP 2. INSTALL THE TAIL LIGHTS

Carefully push the tail light into the mounting position and use a T15 screwdriver to tighten the top and bottom screws.



Repeat the same process for the other side of the tail light. NOTE: Whenever using a power wrench, ensure not to overtighten the screws.

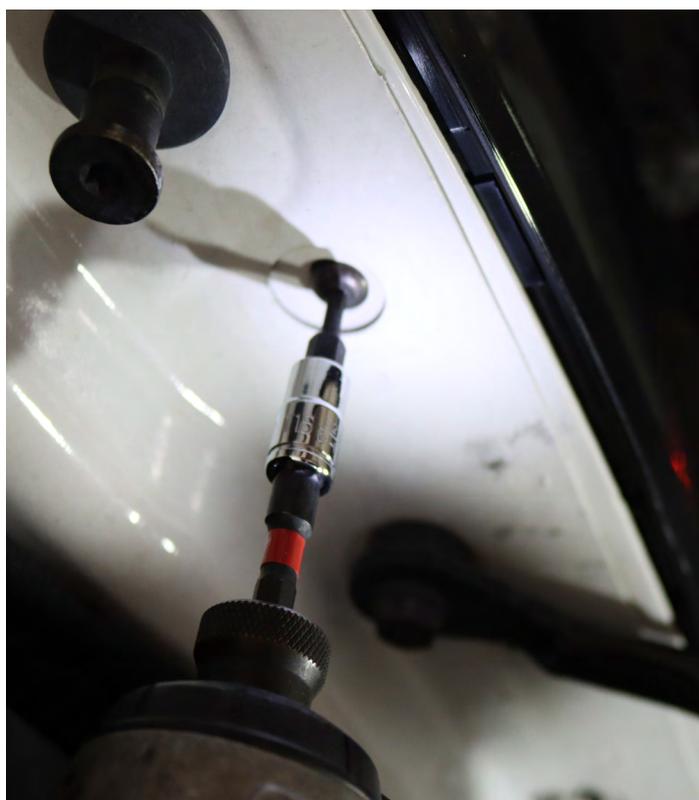

## STEP 3. COMPLETE INSTALLATION

Congratulations! You have completed the installation for ALPHAREX **14-18 Chevrolet Silverado 1500 | 15-19 Silverado 2500HD/3500HD LED TAIL LIGHTS.**

